GB

CONTENTS

BEFORE USING THE APPLIANCE PAGE 53

SAFEGUARDING THE ENVIRONMENT PAGE 53

PRECAUTIONS AND GENERAL HINTS PAGE 54

FREEZING FOOD PAGE 54

FOOD STORAGE PAGE 55

DEFROSTING THE FREEZER PAGE 56

CARE AND MAINTENANCE PAGE 56

TROUBLESHOOTING GUIDE PAGE 57

AFTER SALES SERVICE PAGE 57

INSTALLATION PAGE 58

ELECTRICAL CONNECTION PAGE 59

BEFORE USING THE APPLIANCE

For best use of your appliance, please read the instructions and product description sheets carefully. These contain a description of your appliance and useful tips for storing food.

Keep the instruction booklet and product description sheets carefully for future use.

- After unpacking the appliance, check for damage. Any damage must be reported to the supplier within 24 hours.
- **Following installation, wait at least 2 hours without moving the appliance before connecting it to the mains supply.**
- Before connecting the appliance to the mains supply, please refer to the chapter “Installation”.

SAFEGUARDING THE ENVIRONMENT

1. Packaging

The packaging material is 100% recyclable and carries the recycling symbol ♺. Disposal must be carried out in accordance with local regulations for waste disposal.

Packaging material (plastic bags, polystyrene parts, etc.) is potentially dangerous and must be kept out of the reach of children.

2. Product

The freezer is made of recyclable material. Disposal must be carried out in accordance with local regulations for waste disposal.

Render the appliance unusable by cutting off the power cord. Dispose of this appliance in accordance with local regulations. Take it to an authorised collection centre for the recovery of refrigerant gas.

Information:

This equipment does not use CFC (replaced with R134a) or HFC (replaced with R600a - isobutane). For further details, refer to the rating plate located on the rear of the appliance.

PRECAUTIONS AND GENERAL HINTS

- Do not cover or obstruct the air vent of the appliance.
- Do not store liquids in glass containers in the freezer: risk of bursting.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer: risk of "cold" burns.
- Do not allow children to play or hide inside the freezer: risk of becoming trapped inside and suffocating.
- Keep the keys (if supplied) in a separate place and out of reach of children: risk of children becoming locked inside the appliance.
- Do not ingest the contents (non-toxic) of the ice packs.
- Before cleaning or carrying out maintenance, always unplug the appliance or switch off the power supply.
- The power cable must only be replaced by authorised personnel.

DECLARATION OF CONFORMITY

- This appliance is designed to come into contact with foodstuffs and conforms to D.L. 108 of 25.01.1992 (European Directive 89/109/EEC).

CE

This appliance is designed, built and sold in compliance with:

- the safety provisions of the “Low Voltage” Directive 73/23/EEC;
- the safety provisions of the “EMC” Directive 89/336/EEC, amended by Directive 93/68/EEC.

Appliances with isobutane (R600a)

Isobutane is a natural gas having low environmental impact. Caution is required, however, since isobutane is inflammable. Therefore, ensure that the pipelines of the refrigerant circuit do not get damaged.

FREEZING FOOD

Only use the freezer for storing frozen food, freezing fresh food and production of ice cubes.

FREEZING FOOD

- Defrost the appliance when ice-build up on the freezer walls is excessive (see “Care and maintenance”).
- At least 24 hours before storing fresh food in the freezer, switch the rapid freeze button on. For freezers without this button, turn the thermostat to maximum position
- Observe the maximum freeing capacity specified on the rating plate.
- Place the food you wish to freeze and keep the lid of the appliance closed for 24 hours. At the end of this period, switch OFF the rapid freezing function.
- To freeze the maximum amount of food specified on the rating plate (see figure D in the chapter “Installation”), extend the prefreezing period from 48 hours.

PREPARATION OF FRESH FOOD FOR FREEZING

- Wrap and seal the fresh food in: aluminium foil, plastic wrap, cling film, polyethylene containers with lids, provided they are suitable for freezing foods.
- Food must be fresh, mature and of prime quality in order to obtain high quality frozen food.
- Fresh vegetables and fruit should preferably be frozen as soon as they are picked to maintain the full original nutritional value, consistency, colour and flavour.
- Some meat, especially game, should be hung before it is frozen.

Attention:

- Always leave hot food to cool before placing in the freezer.

FREEZING FOOD

FREEZING OF FRESH FOODS

- Place foods to be frozen in direct contact with the walls of the freezer, as shown in the adjacent figure:
  A) - foods to be frozen,
  B) - foods already frozen.
- Avoid placing foods to be frozen in direct contact with food already frozen.
- For best and fastest freezing, foods should be split into small portions; this will also be useful when the frozen items are to be used.

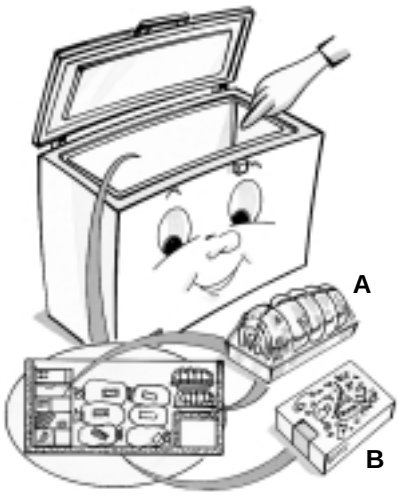

FOOD STORAGE

For storing fresh frozen foods, refer to the adjacent table.

CLASSIFICATION OF FROZEN FOODS

Put the frozen products into the freezer and classify them.

The storage date should be indicated on the packs, to allow use within expiry dates.

ADVICE FOR STORING FROZEN FOOD

When you purchase frozen food:

- Make sure that the packaging is not damaged (frozen fod in damaged packaging may have deteriorated). Ensure also that the package is not swollen and that there are no liquid stains indicating that the product may have thawed partially during its period of storage.
- When shopping, leave frozen food purchases till last and transport the products in a thermally insulated bag.
- Once at home, place the frozen foods immediately in the freezer.
- Avoid subjecting foods to temperature variations. Observe the “best before” date on the package.
- Always observe the storage information on the package.

MONTHS	FOOD
2-3	
4-6	
6-8	
10-12	

Attention:

Eat fully or partially defrosted foods immediately. Do not refreeze unless the food is cooked after it has thawed. Once cooked, the food can be refrozen.

If there is a long power failure:

- **do not open the freezer lid except to place ice packs (if available) over the frozen foods on the right and left of the freezer. This will slow down the rise in temperature.**

DEFROSTING THE FREEZER

The appliance should be defrosted when the thickness of ice on the walls reaches 5-6 mm.

- Unplug the appliance.
- Remove the packs of food from the freezer and wrap them close together in newspaper. Store in a very cool place or thermally insulated bag.
- Leave the freezer lid open.
- Remove the internal drainage channel plug (depending on model).
- Remove the external drainage channel plug (depending on model) and reposition it as shown in figure **(A)**.
- Place a bowl beneath the drainage channel to collect the residual water. If available, use the separator **(B)**.
- Speed up defrosting by using a spatula to detach the ice from the freezer walls.
- Remove the ice from the bottom of the freezer.
- **In order to avoid permanent damage to the freezer interior, do not use pointed or sharp metal instruments for removing the ice.**
- **Do not use abrasive products or heat up the interior artificially.**
- **Dry the interior of the freezer compartment thoroughly.**
- On completion of the defrosting, refit the plug.
- Plug in the appliance.

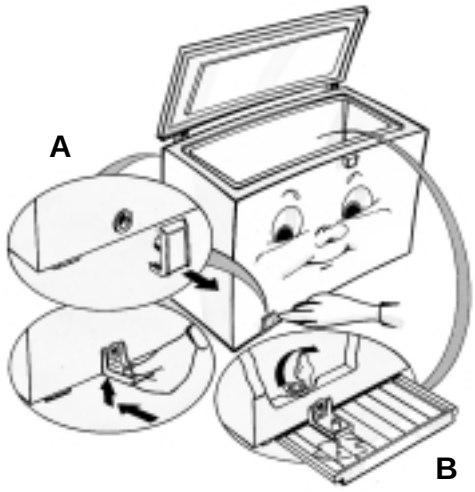

CARE AND MAINTENANCE

To obtain the best results from your appliance, carry out cleaning and maintenance at least once a year.

- Remove the ice from the upper edge.
- Clean the inside after defrosting, using a sponge dampened with warm water and/or mild detergent.
- Clean the motor cooling grille (depending on model).
- Remove dust from the condenser on the rear of the appliance.

Attention:

Before carrying out maintenance, unplug the appliance.

Do not use abrasive products, scourers or stain-removers (e.g. acetone, trichloroethylene) to clean the appliance.

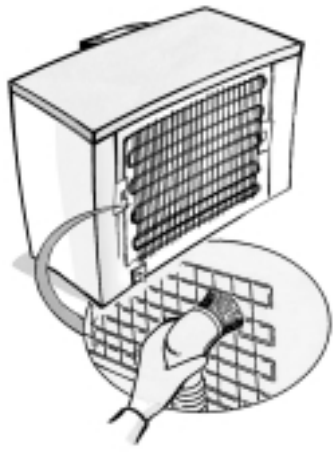

TROUBLESHOOTING GUIDE

1. **The red light remains lit.**
   - Defrosting in progress?
   - Contents impeding correct closure of the freezer lid?
   - Appliance too near a source of heat?
   - Thermostat setting correct?
   - Are the ventilation grille and condenser clean?
2. **Appliance is excessivelly noisy.**
   - Is the appliance level?
   - Is the appliance in contact with other fixtures or items that could give rise to vibration?
   - Has the packaging been removed from under the freezer?

   Attention: Gurgling noises from the refrigerating circuit after the compressor cuts out are perfectly normal.
3. **The green light is off and the appliance is not working.**
   - Is there a power failure?
   - Is the plug properly inserted in the socket?
   - Is the electric cable intact?
4. **The green light is off and the appliance is working.**
   - The green light is not working. Contact After Sales Service for a replacement.
5. **Compressor runs continuously.**
   - Have hot foods been put in the freezer?
   - Has the freezer lid been open for a long time?
   - Is the appliance located in a room which is too hot or too close to a source of heat?
   - Is the thermostat setting correct?
   - Rapid freeze button pressed inadvertently?
6. **Too much ice on the upper edge.**
   - Are the defrost water drainage plugs correctly positioned?
   - Is the lid correctly closed?
   - Is the appliance lid seal damaged or deformed? (see the chapter “Installation”).
   - Have the 4 protection pieces been removed? (see the chapter “Installation”).
7. **Formation of condensate on the external walls of the freezer.**
   - It is normal that condensate forms under certain atmospheric conditions (humidity above 85%) or if the appliance is located in a damp or badly ventilated room. The performance of the freezer is in no way affected.
8. **The layer of ice on the internal walls of the freezer is not uniform.**
   - This phenomenon is quite normal.

AFTER SALES SERVICE

Before contacting After Sales Service.

1. Try to rectify the fault yourself (see “Troubleshooting guide”).
2. Switch the appliance on again to see if the problem persists. If it does, switch off and wait for about an hour before switching on.
3. If the problem persists, contact After Sales Service.
   Specifiy:
   - the nature of the fault,
   - the model,
   - the service number (the number after the word SERVICE on the rating plate on the rear of the appliance),
   - your full address,
   - your telephone number and area code.

INSTALLATION

- Unpack the appliance and ensure that the various elements (plastic bags, polystyrene pieces, etc.) are well out of the reach of children.
- **Remove the 4 protection pieces inserted between lid and appliance (A).**
- **<u>Warning</u>: two of the four protection pieces (A) used to protect the door during transport must be positioned into the seating in the plastic condenser supports. This is located on the rear panel of the appliance (E).** This measure is necessary to ensure the correct distance between applicance and panel.
- **Remove the packaging from the bottom (B) of the freezer.**
- **After connecting the appliance to the mains, when the right temperature has been reached (about an hour), ensure that the fast freeze function is inactive (yellow LED is off).**
- **During the freezing phase, the lid does not open until the right temperature has been reached (about 1 hour).**
- Ensure that the defrosting water drainage plug is correctly positioned **(C)**.
- Ensure that the lid seal is not damaged: to remove any deformation, warm the seal with a hair dryer.
- Before connecting the appliance to the mains supply, ensure that the voltage corresponds to that given on the rating plate (see figure below).
- After the freezer has been installed, check that it is not resting on the mains cable.
- Install the appliance in a dry, well ventilated room. Avoid locations near a source of heat or in direct sunlight.
- For best operation of the appliance and in order to avoid damage when the lid is opened, leave a space of at least 7 cm from the rear wall and 7 cm at the sides.
- Fit the accessories.

ELECTRICAL CONNECTION

- **Electrical connections must be made in accordance with local regulations.**
- Data regarding voltage and absorbed power are given on the rating plate on the rear of the appliance **(D)**.
- **Regulations require that the appliance is earthed. The manufacturer declines all liability for injury to persons or animals and damage to property resulting from failure to observe the above prescriptions.**
- If the plug and socket are not of the same type, have the socket replaced by a qualified electrician.
- Do not use extension leads or adapters.

DISCONNECTING THE APPLIANCE

- Electrical disconnection must be possible either by unplugging the appliance or by means of a double-pole switch located upline from the socket.

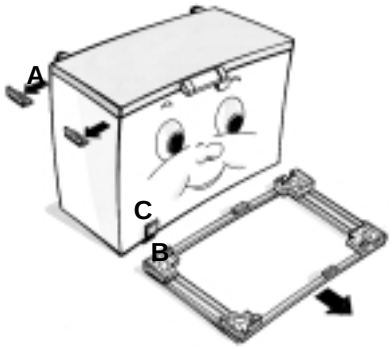

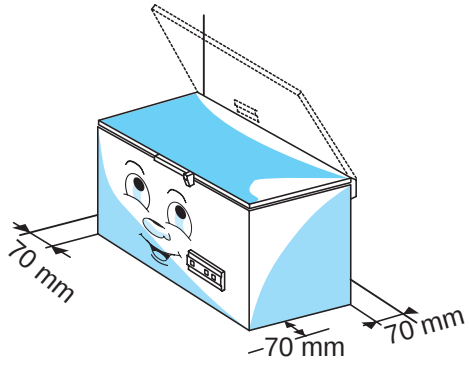

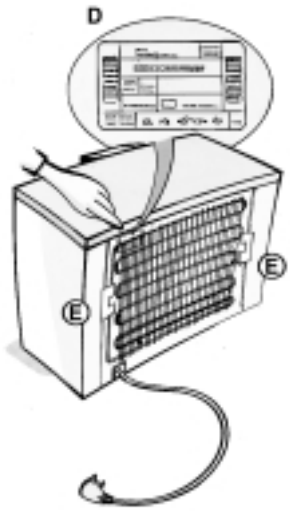

ELECTRICAL CONNECTION

For Great Britain only

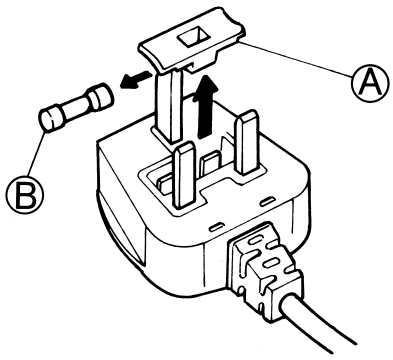

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

Connection to a rewirable plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.

Connection to a rewirable plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.

1. yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter “N” or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter “L” or coloured red.

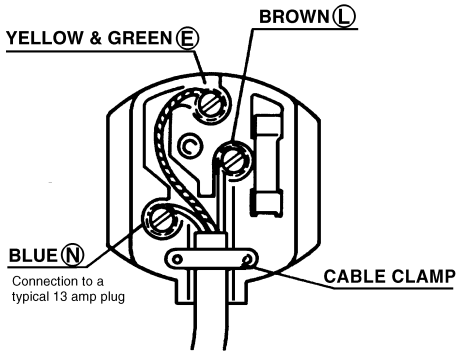

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.